

Miscellaneous Manuals

Odds and ends for items that I don't want to keep a physical manual for

- [Home Items](#)
 - [Chamberlain MC100 Garage Door Remote](#)

Home Items

Reference for home-related items

Chamberlain MC100 Garage Door Remote

Programming Steps

1. **Start with the garage door closed.**
2. **Press and hold the bottom button on the remote until the blue LED stays solid (approx. 15 sec), then release the button.**
3. **Press and release the learn button on the garage door opener.**
4. **On the remote, press and release the button you would like to program twice. The LED will blink and the remote will start to send preprogrammed codes. This process can take up to 60 seconds.**
5. **When the door begins to open, press and release either of the buttons on the remote control to confirm the code and exit programming mode.**
6. **Test the remote by pressing the button you programmed. If it does not work, repeat steps 1-5.**

Batteries are 3V CR2032 size